


1 Hour hand, 1 Minute Hand, 1 Second Hand (Sweep)

Assembly Instructions:

- Slide rubber washer onto the shaft of the clock movement, pushing all the way down to the base.
- 2. Slide brass washer onto the shaft.
- 3. Slide clock face dial onto the shaft.
- 4. Slide brass washer onto the shaft.
- 5. Screw hex nut onto the shaft; be careful not to overtighten.
- 6. Slide hour hand onto the shaft all the way until it stops. Turn to the 12:00 position.
- 7. Repeat with the minute hand and turn to 12:00.
- 8. Press the stem of the second hand (sweep) into the top of the shaft until it stops.

 Turn to the 12:00 position.

Note: After completing assembly, ensure that the clock hands and sweep are not bent, as this will prevent proper rotation of the clock parts.

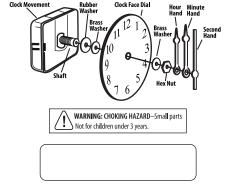

G19-294





©2019 PLAID ENTERPRISES, INC. • 09/19 P.O. BOX 7600 • NORCROSS, GA 30091-7600 (800) 842-4197 MADE IN CHINA