## **DRUID HORNS: FOAM BUILDING INSTRUCTIONS**

## **SUPPLY LIST**


- 1. Horn Pattern
- 2. Texture Pattern
- 3.4mm EVA Foam
- 4. 2mm EVA Foam
- 5. Scissors
- 6. Craft Knife
- 7. Contact Cement
- 8. Permanent Marker
- 9. Super Glue


## **INSTRUCTIONS**

- 1. Using scissors, cut out the Druid Horns pattern.
- 2. Lay the paper patterns onto 4mm EVA foam and trace with a permanent marker. Transfer any notations on the patterns onto the foam.
- 3. Trace the pattern onto 4mm foam a second time, reversing all of the patterns. Be sure to designate the pieces that belong to the Left horn and the pieces that belong to the Right horn.
- 4. Use a craft knife to cut the shapes from the foam.
- 5. Using your rotary tool, bevel the bottom tips of your horn pieces so that they will come together in a point.
- 6. Follow the notations on the patterns to adhere the pieces together using contact cement.
- 7. Using a rotary tool, smooth out any inconsistencies in the seams.
- 8. Repeat the transferring and cutting process for the Horn Texture pattern, designating the Right pieces from the Left pieces.
- 9. Beginning with the smallest piece, #10, use super glue to adhere the texture piece near the tip of the horn, placing the piece so that the seam is on the under side of the horn. Use scissors to trim any excess foam at the seam.
- 10. Repeat this step with piece #9, slightly overlapping piece #10, just enough so that the edge of piece #10 is covered by piece #9.
- 11. Continue this process, gluing and overlapping the pieces in order until the horn is covered. Repeat this for the second horn as well.







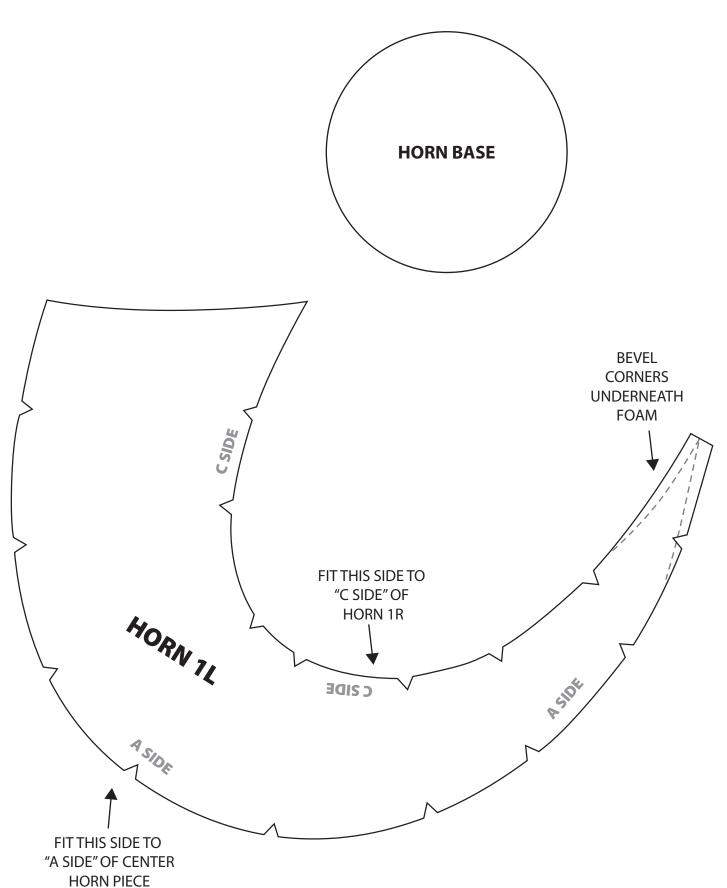


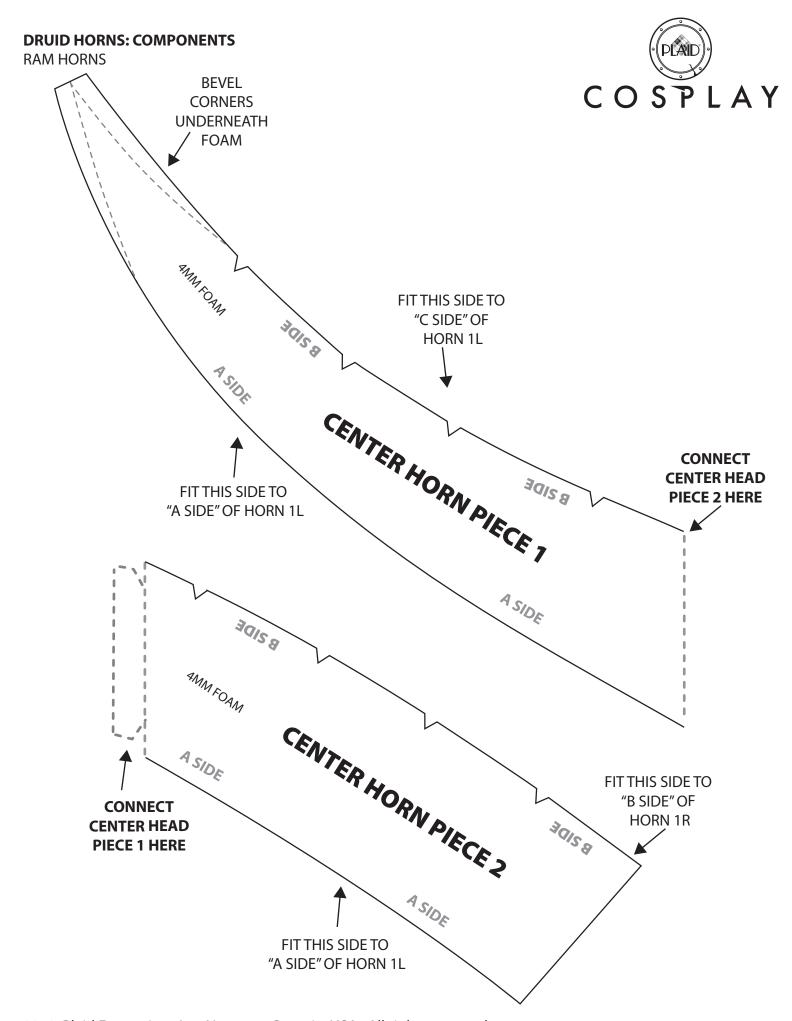



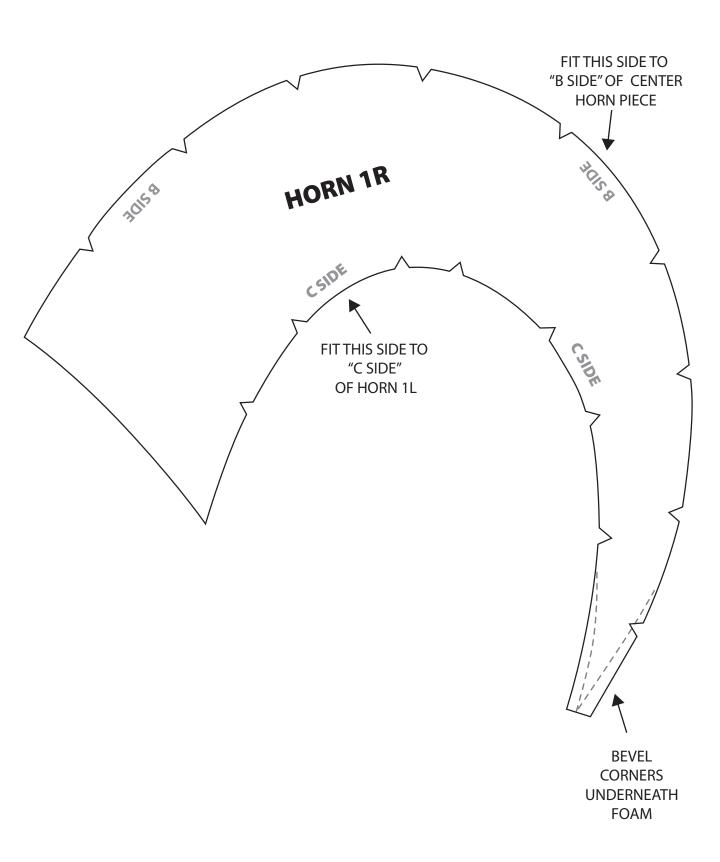

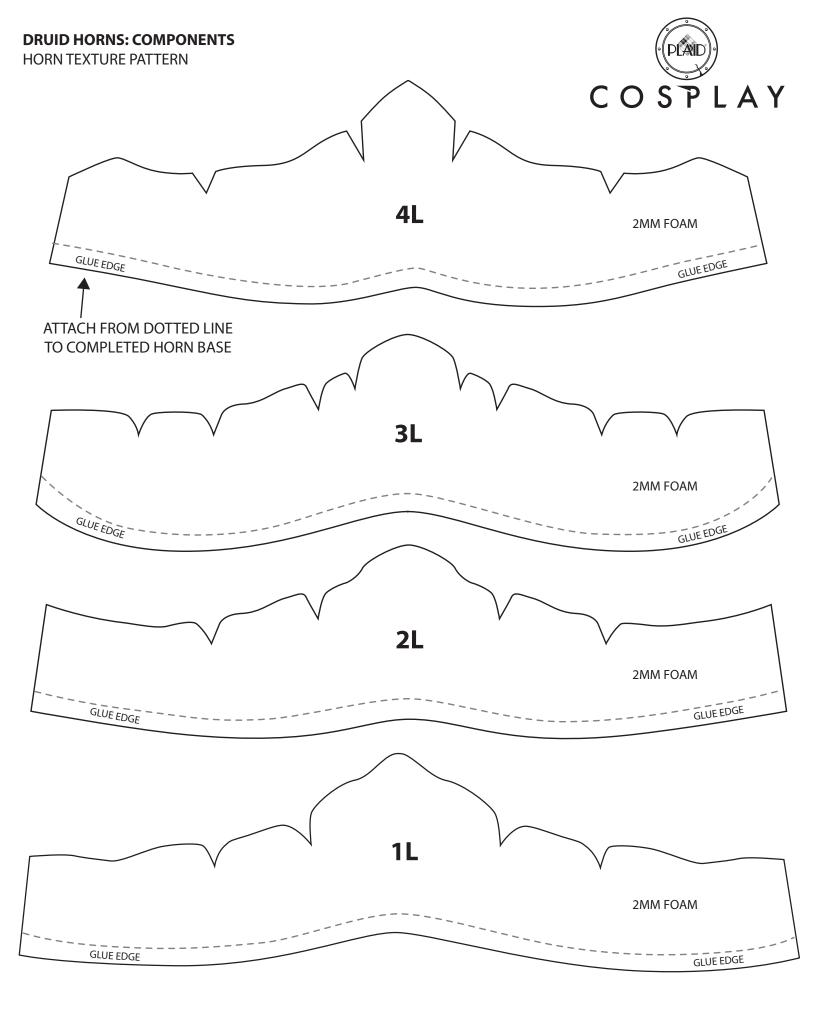

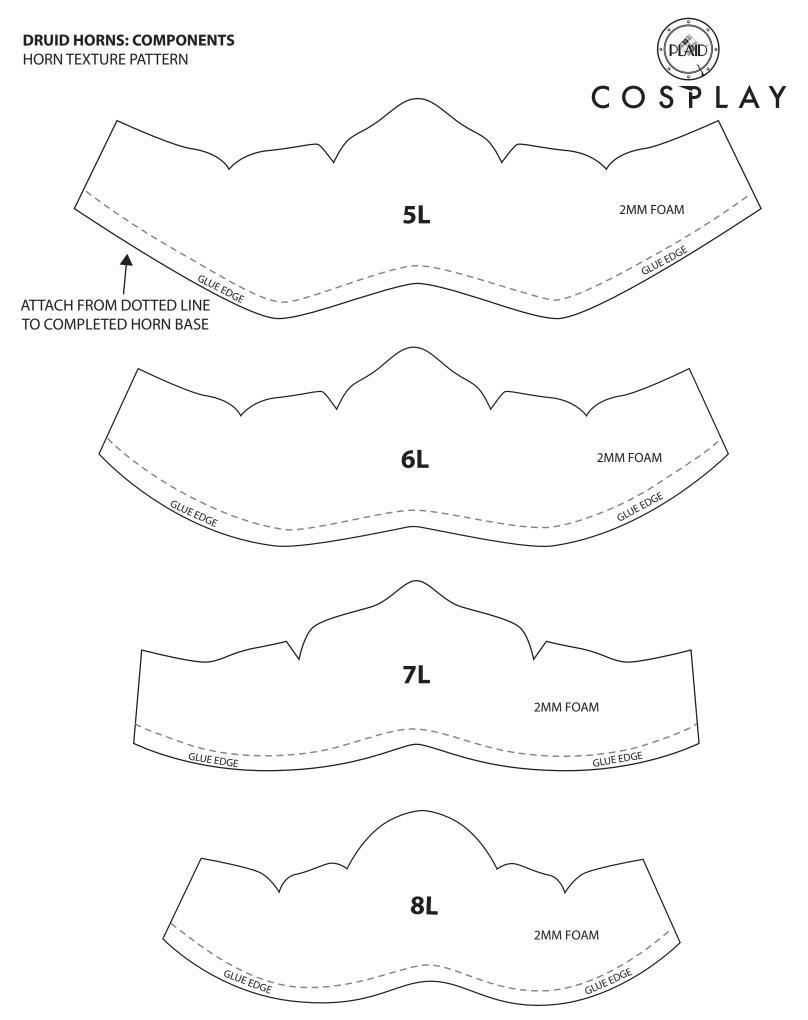

## **DRUID HORNS: COMPONENTS**

HORN TEXTURE PATTERN



